



GET IN TOUCH: 1-844-229-9906

# WELCOME ABOARD

Everything you need to effectively present and sell PVC SPRAY 'N LOCK™




For Display Set-Up  
Video, Flyers,  
Brochures and  
More Visit:




WWW.SNLSETUP.COM

## PVC SPRAY 'N LOCK DISPLAY SET UP INSTRUCTIONS


Floor Display Kit  
includes:  
Body (with  
shelves and  
spacers), Base  
and Header.

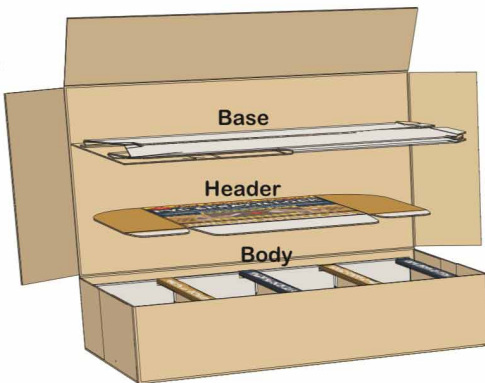


Step 1 - Lay Base flat. Lift top panel upward while pulling sides outward. Square up Base as shown below.

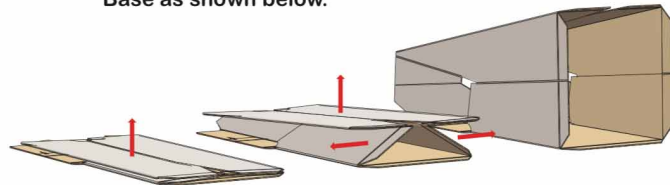


Step 6 - Set Header on top of Body and insert side flaps into the slots at the top of the Body.

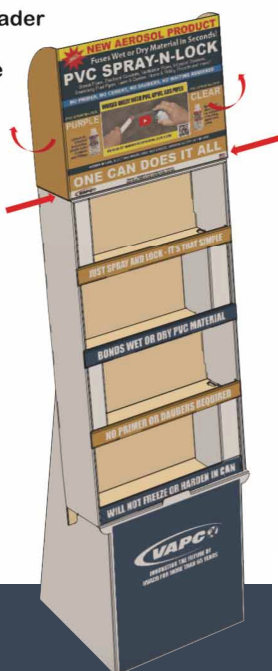


Step 5 - Fold the bottom flaps of the Header 90° under as shown below.

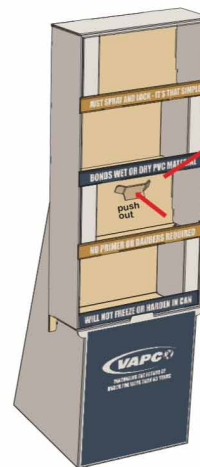

Step 4 - Set the Body onto Base. Push "T-lock" from Body thru the wings at top of Base to secure display.

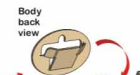

Step 3 - Fold bottom flanges under to stable Base. Push the platform down into matching slots on sides.

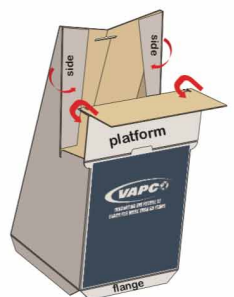

Step 2 - Position Base on floor. Fold sides inward. Fold platform to form a "T" shown above.



VISIT [WWW.SNLSETUP.COM](http://WWW.SNLSETUP.COM)

THANKS FOR YOUR ORDER